


PROXCARD UNLOCKING OPERATION UNASSIGNED / STATION MODE

1


CENTER THE CARD OVER THE KEYPAD.
THE YELLOW LED INDICATES THE PROX CARD IS READ.
IF THE YELLOW LED DOES NOT ILLUMINATE, PRESS THE (P)
BUTTON TO PUT THE LOCK INTO CARD READ MODE.

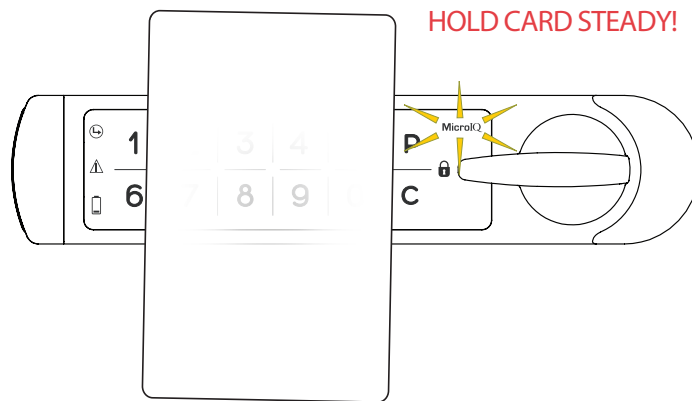

ACCIDENTALLY TOUCHING A DIGIT KEY WHEN PRESENTING A PROX CARD,
CAN DELAY READING OF A CARD.

2

WHEN THE GREEN LED TURNS ON (CAN TAKE UP TO 4 SECONDS)
TURN THE KNOB TO UNLOCK

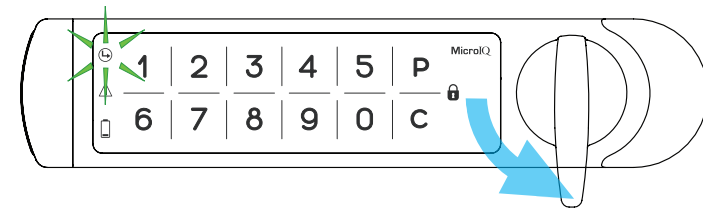

3

UPON RELEASING THE KNOB,
THE UNIT WILL RELOCK AND
THE GREEN LED WILL TURN OFF.

AFTER RELOCKING, THERE CAN BE UP TO
AN 8 SECONDS DELAY BEFORE THE LOCK
WILL BE READY TO READ THE NEXT CARD.

